


**PREPZILLA MILLHOG
GEAR HEAD ASSEMBLY PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
P-15	BALL BEARINGS	P-37	TORQUE ACCEPTER SCREWS
P-16	TOOL POST SCREWS	P-38	BALL RETAINER
P-17	BLADE LOCK	P-39	BALL RETAINER SCREWS
P-18	BLADE LOCK SCREWS	P-40	FEED KNOB
P-19	MANDREL WIPER	P-41	FEED WRENCH SCREWS
P-20	TOOL POST	P-42	FEED WRENCH
P-21	CHIP SHIELD	P-43	FEED KNOB BALLS (20 REQ'D)
P-22	MANDREL BEARING SPACER	P-44	BALL SCREW
P-23	CUTTERHEAD	P-45	SNAP RING
P-24	"O" RING SEAL	P-46	BEARING CAP
P-25	DRIVEN SPUR GEAR	P-47	SNAP RING
P-26	TAPERED ROLLER BEARING	P-48	BEARING
P-27	TAPERED BEARING RACE	P-49	BEVEL DRIVEN GEAR
P-28	HOUSING	P-50	KEYS
P-29	TAPERED BEARING RACE	P-51	DRIVE SPUR GEAR
P-30	MANDREL	P-52	BEARING
P-31	TAPERED ROLLER BEARING	P-53	SPACER
P-32	LOCK WASHER	P-54	SNAP RING
P-33	LOCK NUT	P-55	BEARINGS
P-34	MANDREL SUPPORT SCREWS	P-56	BEVEL DRIVE GEAR
P-35	MANDREL SUPPORT	P-57	DRIVEN SPUR GEAR SCREWS
P-36	TORQUE ACCEPTER		

NOT SHOWN

P-42A GRIP FOR P-42


ESCO TOOL PREPZILLA GEAR HEAD ASSEMBLY

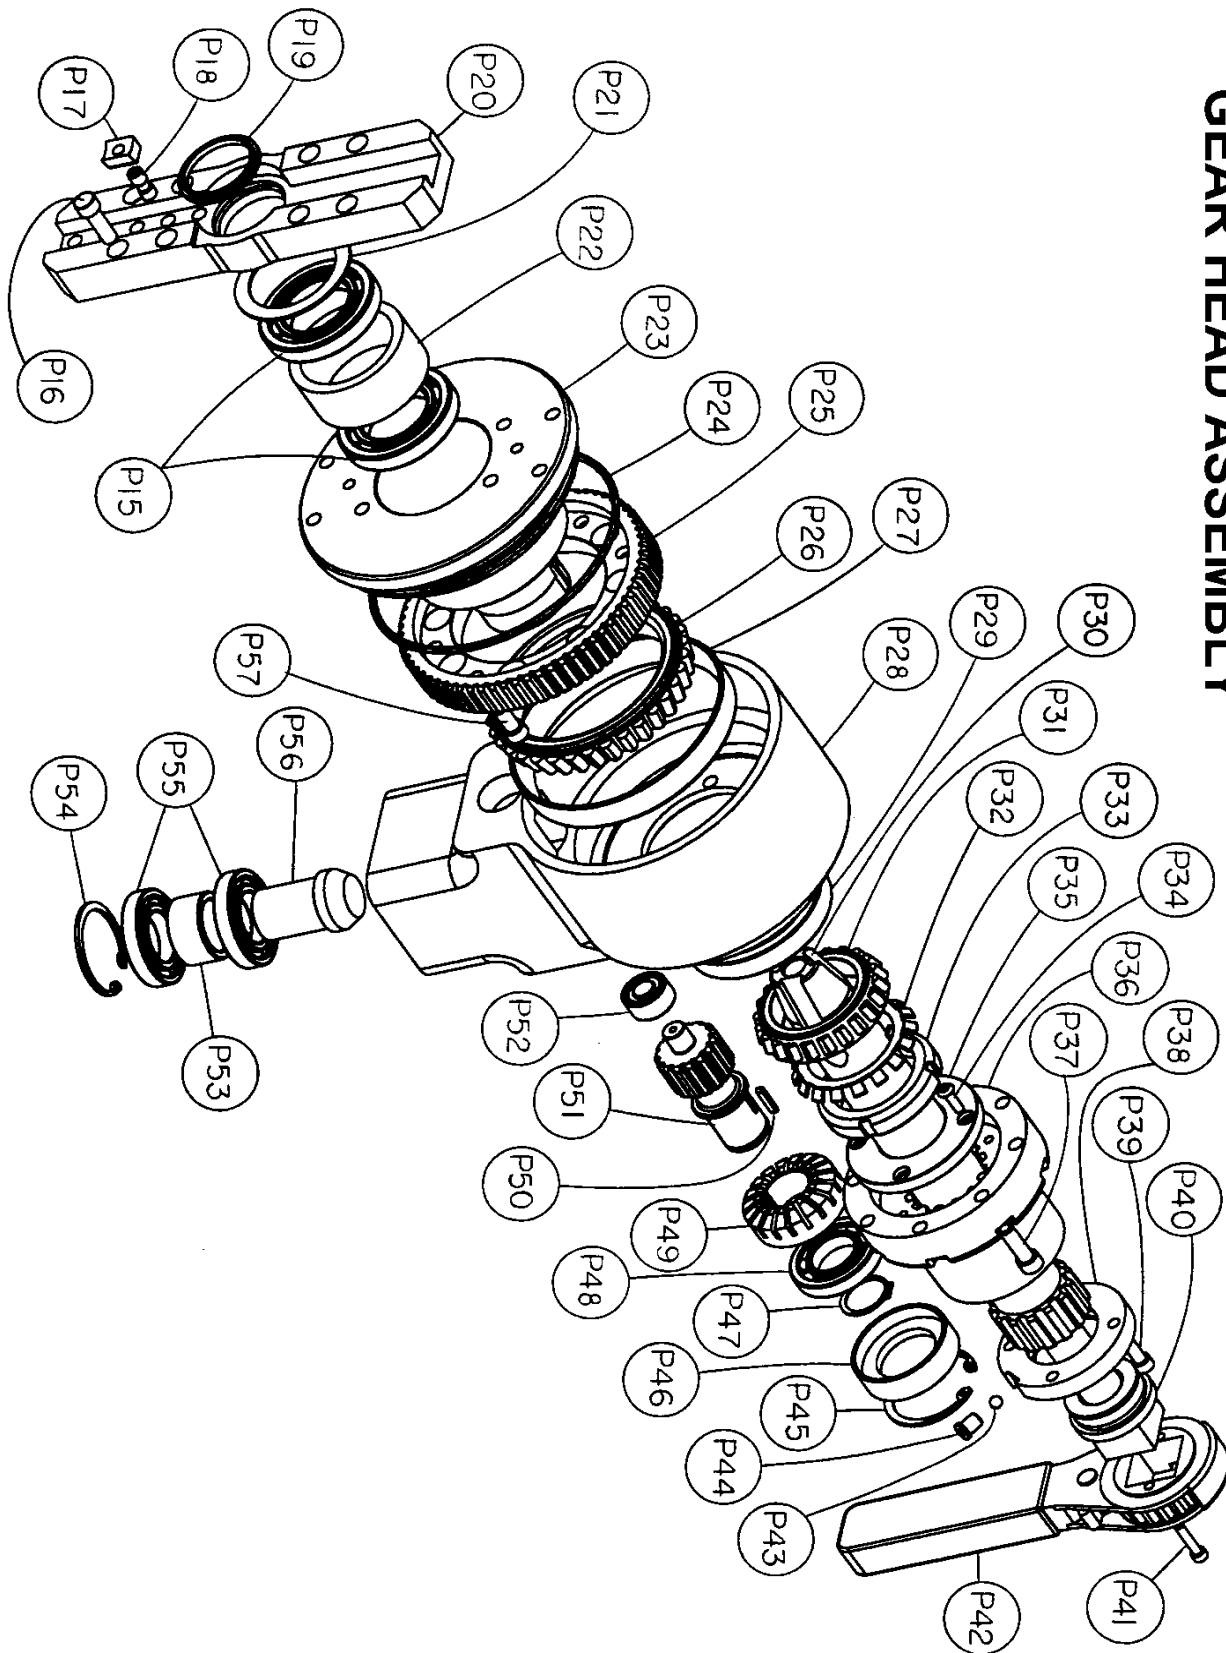

**PREPZILLA MILLHOG
AIR MOTOR HANDLE ASSEMBLY PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
P-86	HANDLE HOUSING	P-95	"O" RING
P-87	ROLL PIN	P-96	NUT
P-88	THROTTLE LEVER	P-97	"O" RING
P-89	BUSHING	P-98	SCREEN
P-90	THROTTLE PIN	P-98A	SCREEN
P-91	VALVE SEAT	P-99	FOAM
P-92	AIR VALVE	P-100	EXHAUST DEFLECTOR
P-93	SPRING	P-101	"O" RING
P-94	DIRT SCREEN		


ESCO TOOL PREPZILLA AIR MOTOR HANDLE ASSEMBLY

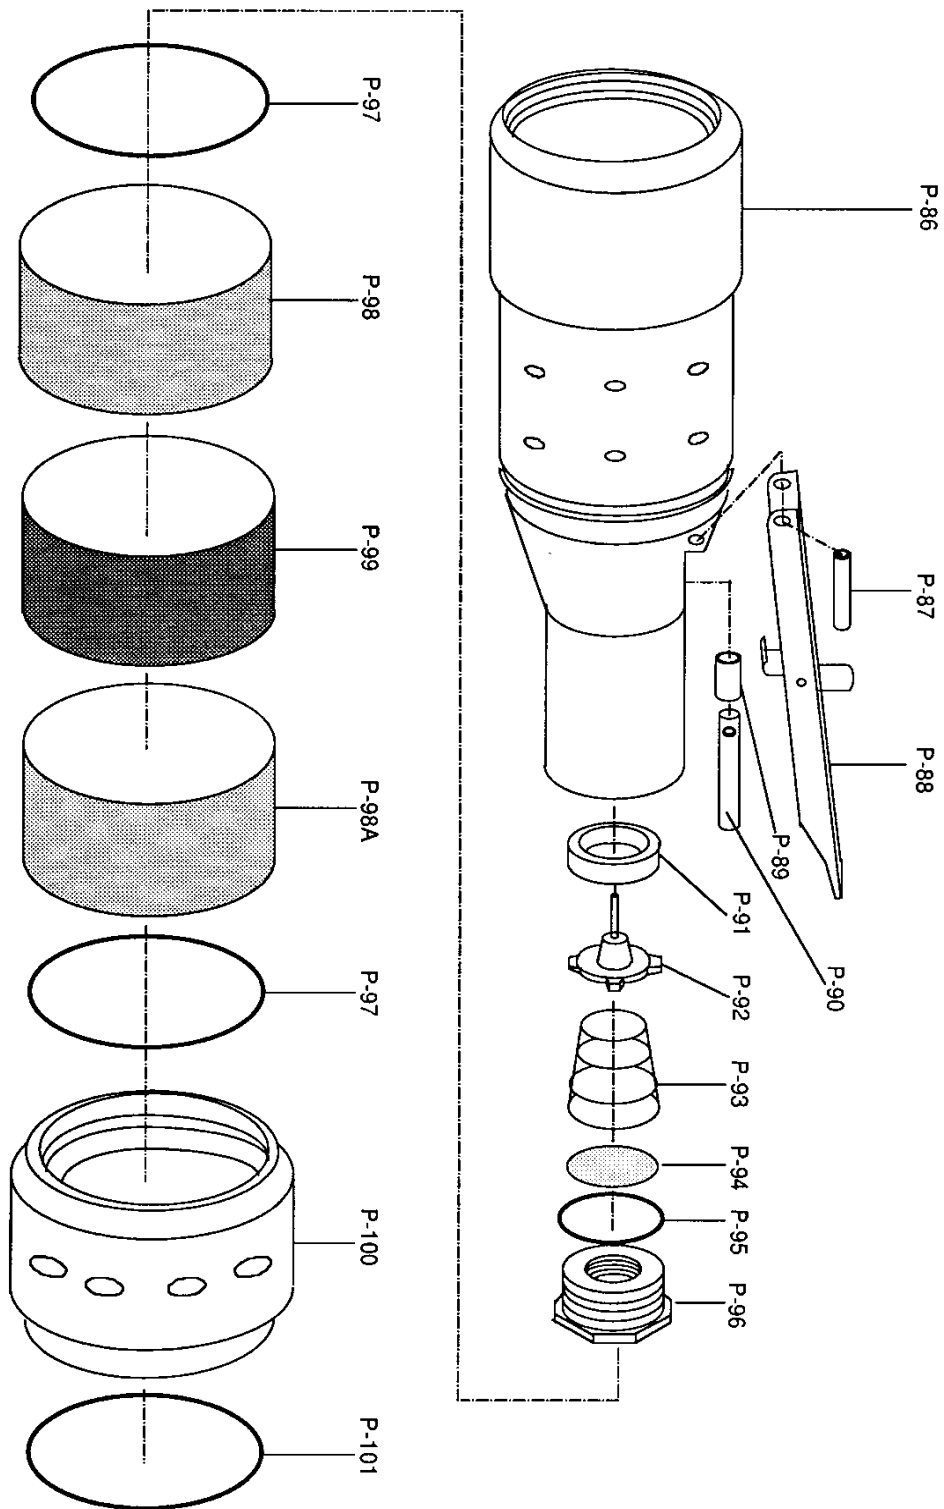

**PREPZILLA MILLHOG
AIR MOTOR GEAR SPIDER ASSEMBLY PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
P-60	SPUR GEARS	P-69	SPUR GEARS
P-61	BEARINGS	P-70	BEARINGS
P-62	PINS	P-71	PINS
P-63	BEARING	P-72	SNAP RING
P-64	HOUSING SCREWS	P-73	HOUSING
P-65	"O" RING SEAL	P-74	SPACER
P-66	BEARING	P-75	3 GEAR SPIDER
P-67	2 GEAR SPIDER	P-76	DRIVE KEYS
P-68	SNAP RING		


ESCO TOOL PREPZILLA AIR MOTOR SPIDER GEAR ASSEMBLY

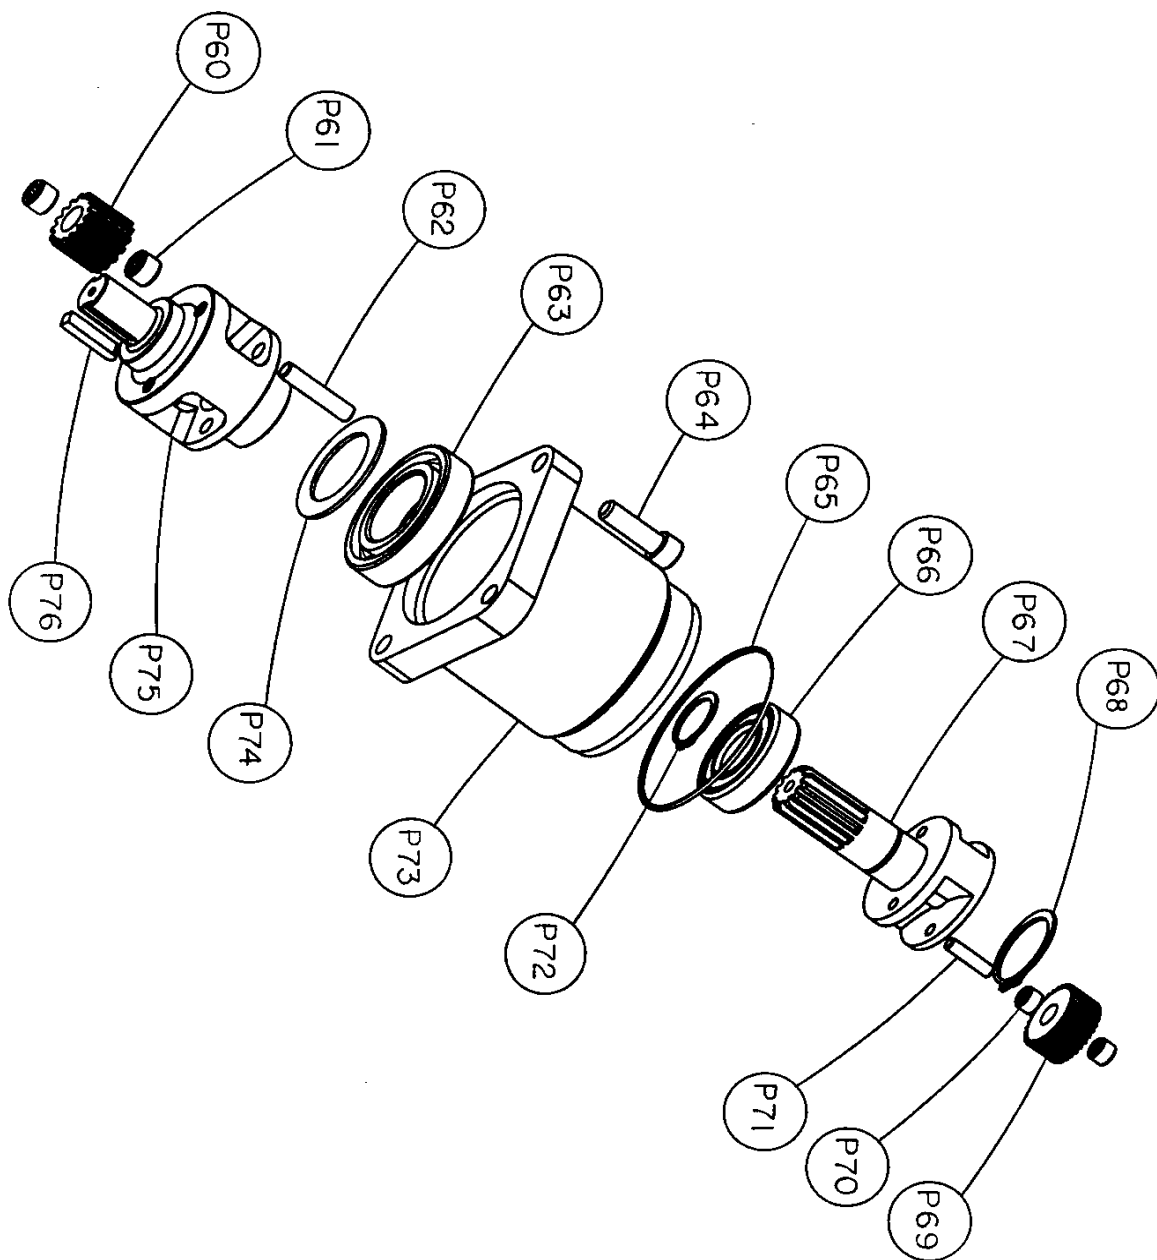

PREPZILLA MILLHOG
AIR MOTOR CYLINDER ASSEMBLY PARTS LIST

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
P-77	BEARING	P-82	BEARING RETAINER CAP
P-78	FRONT END PLATE	P-83	BEARING
P-78A	FRONT SPACER (NOT SHOWN ON DRAWING)	P-84	BEARING SPACER
		P-85	VANES / SET (5 PER SET)
P-79	ROTOR		
P-80	CYLINDER		
P-81	REAR END PLATE		


ESCO TOOL PREPZILLA AIR MOTOR CYLINDER ASSEMBLY

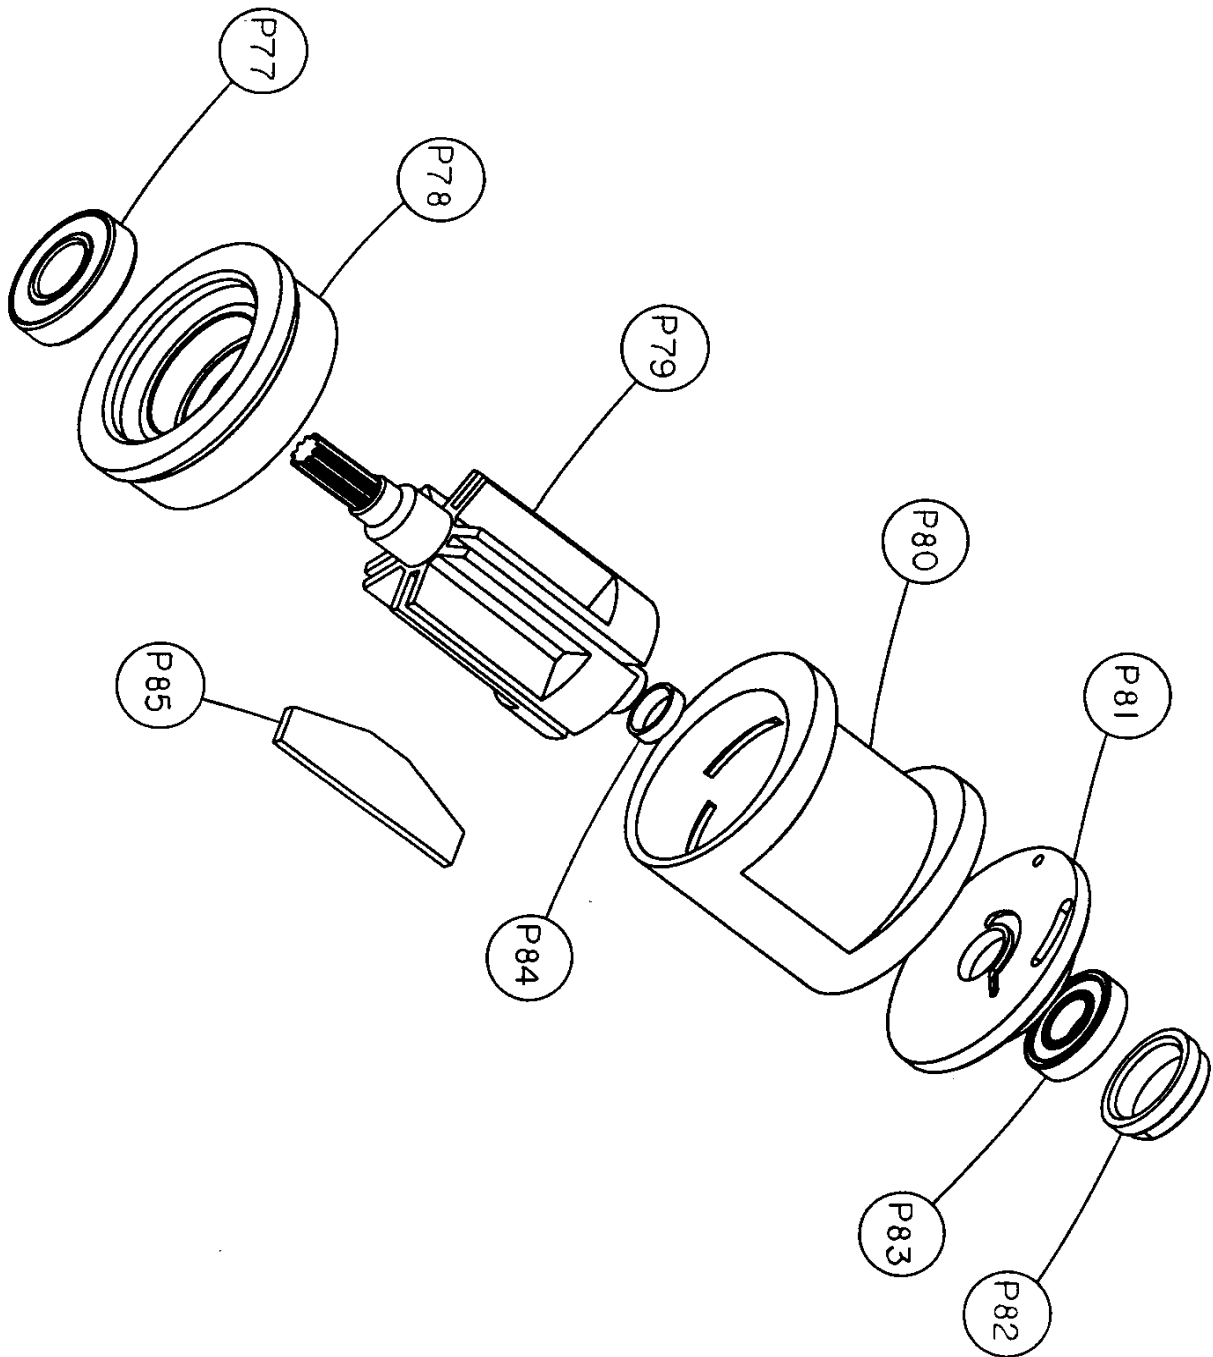

**PREPZILLA MILLHOG
DRAW ROD ASSEMBLY PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
P-01	CLAMP RIB 1.575"-2.050" I.D.	P-09	CLAMP PAD SCREW
P-02	CLAMP RIB 2.025"-2.505" I.D.	P-10	ROLL PIN
P-03	CLAMP RIB 2.475"-2.955" I.D.	P-10A	CLAMP RIB SPRINGS
P-04	CLAMP RIB 2.925"-3.405" I.D.	P-11	DRAW ROD
P-05	CLAMP PAD SET	P-12	DRAW ROD NUT
P-06	CLAMP PAD SET	P-13	STOP COLLAR
P-07	CLAMP PAD SET	P-13A	STOP COLLAR SCREW
P-08	CLAMP PAD SET	P-14	ACTUATOR (STANDARD)

ESCO TOOL PREPZILLA DRAW ROD ASSEMBLY

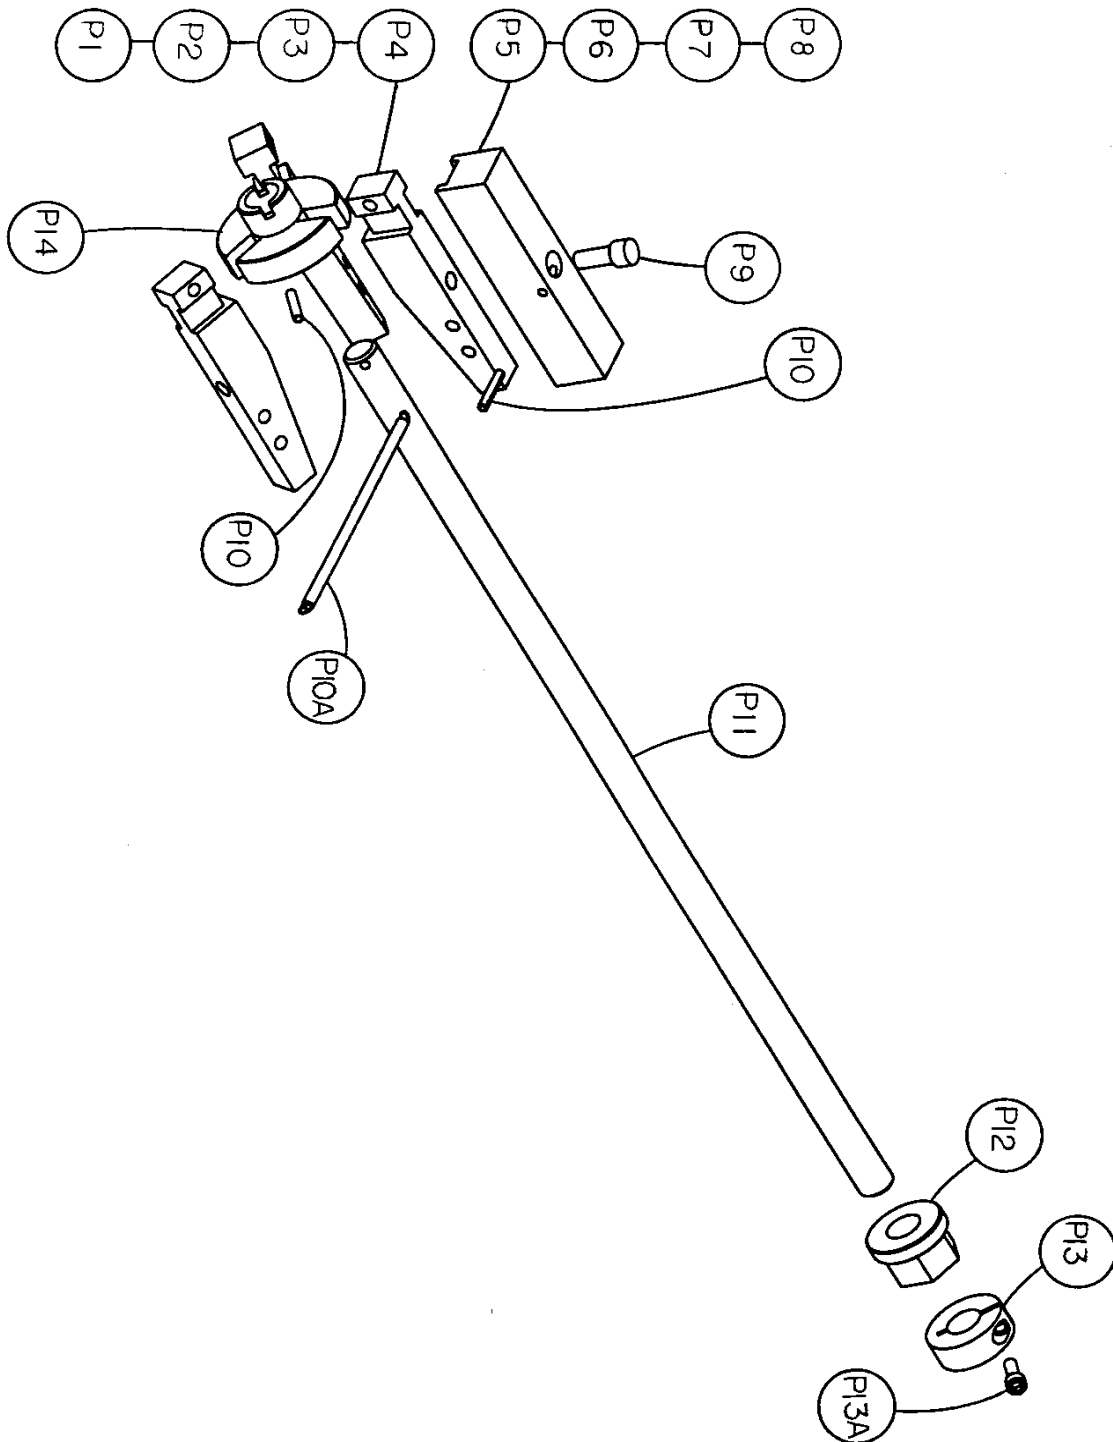

PAGE IS INTENTIONALLY LEFT BLANK


PREPZILLA MILLHOG
PCD-110/220 ELECTRIC MOTOR ASSEMBLY

<u>Esco Part</u>	<u>Description</u>	<u>Pos. No.</u>
PCD-01	ROTOR COMPLETE, 220 VOLT	1
PCD-01A	ROTOR COMPLETE, 110 VOLT	1A
PCD-02	STATOR COMPLETE, 220 VOLT	2
PCD-02A	STATOR COMPLETE, 110 VOLT	2A
PCD-03	MOTOR HOUSING	3
PCD-04	AIR GUIDING RING	4
PCD-07	CARBON BRUSH	7
PCD-08	DISK	8
PCD-09	SPRING DISK 34	9
PCD-10	SCREW CM4x12	10
PCD-11	BALL BEARING	11
PCD-12	MAGNET RING	12
PCD-13	BEARING SEAL	13
PCD-14	CIRCUIT BOARD-220V	14
PCD-14A	CIRCUIT BOARD-110V	14A
PCD-15	REVERSER	15
PCD-16	SELF TAPPING SCREW	16
PCD-17	MOTOR CAP	17
PCD-18	SCREW	18
PCD-22	CONDENSOR	2
PCD-23	SIDE HANDLE	23
PCD-24	SWITCH	24
PCD-25	CONNECTION CABLE, 220V	25
PCD-25A	CONNECTION CABLE, 110V	25
PCD-26	CABLE SLEEVE	26
PCD-27	LOCKING FLANGE	27
PCD-28	SCREW 4.2x16	28
PCD-29	SCREW	29
PCD-30	SELF TAPPING SCREW	30
PCD-31	END SHIELD	31
PCD-32	SAFETY RING 28/1.2	32
PCD-33	BEARING	33
PCD-34	SAFETY RING	34
PCD-35	SCREW 4.2x16	35
PCD-36	NEEDLE SLEEVE	36
PCD-37	SEAL	37
PCD-38	NOTCHED PIN 5x16	38
PCD-39	GEARBOX HOUSING	39
PCD-40	BEARING	40
PCD-41	NEEDLE BEARING	41
PCD-42	DISK OF NEEDLE BEARING	42
PCD-43	BEARING	43
PCD-44	LOCKING RING	44
PCD-45	GROOVED BALL BEARING	45

PREPZILLA MILLHOG (CONTINUED)
PCD-110/220 ELECTRIC MOTOR ASSEMBLY

<u>Esco Part</u>	<u>Description</u>	<u>Pos. No.</u>
PCD-46	DISK F. GROOVED BALL BEARG	46
PCD-47	LOCKING RING	47
PCD-48	INTERMEDIATE SHAFT 1	48
PCD-49	COUPLING WHEEL	49
PCD-50	GEAR SLEEVE	50
PCD-51	INTERMEDIATE WHEEL 1	51
PCD-52	SPRING WASHER	52
PCD-53	WASHER	53
PCD-54	WASHER	54
PCD-55	CLUTCH WASHER	55
PCD-56	C-CLIP	56
PCD-57	COUPLING, COMPLETE	57
PCD-58	INTERMEDIATE SHAFT 2	58
PCD-59	FITTING SPRING HARDENED	59
PCD-60	CLUSTER GEARS	60
PCD-61	COUPLING BOLT	61
PCD-62	GEAR SWITCH	62
PCD-63	INTERMEDIATE SHAFT 3	63
PCD-64	INTERMEDIATE WHEEL 2	64
PCD-65	WORK SPINDLE	65
PCD-66	SPINDLE WHEEL	66
PCD-67	FITTING DISK	67
PCD-68	FITTING SPRING	68
PCD-69	LOCKING RING	69
PCD-71	DISK SPRING	71
PCD-72	GREASE CHAMBER	72
PCD-73	NUT, HEXAGON 8M10 x 1	73
PCD-74	DISK OF NEEDLE BEARING	74


ETE 32/2.3 R/RL **110 / 230 Volt**

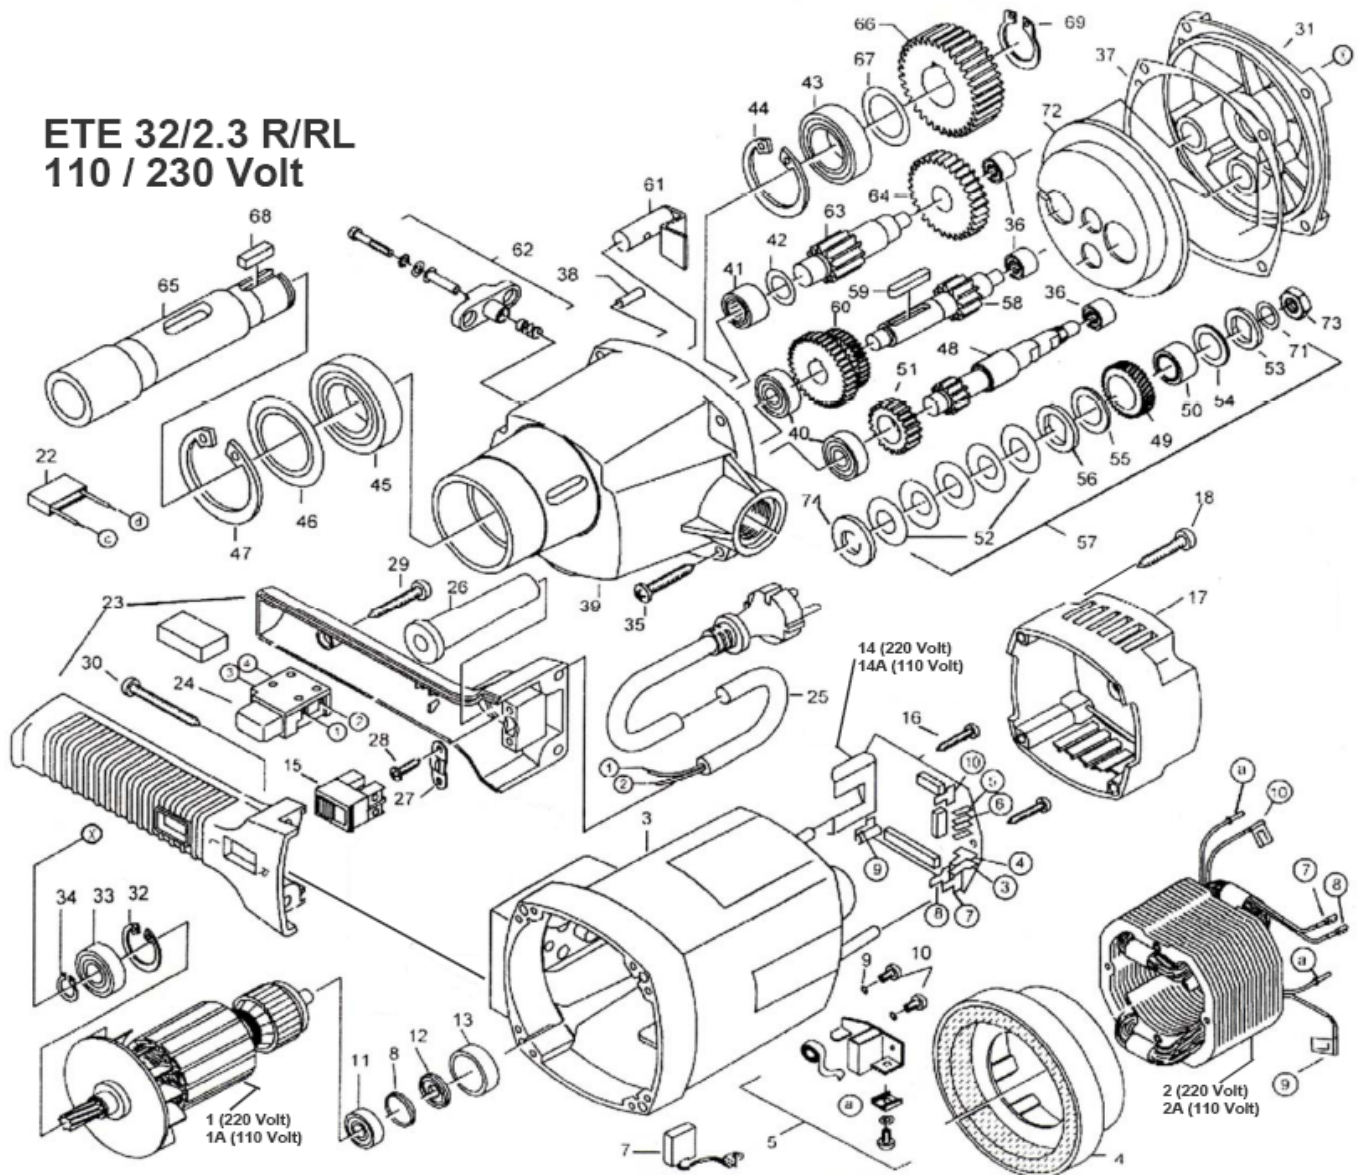

**PREPZILLA MILLHOG
ELECTRIC MOTOR ADAPTER ASSEMBLY**

<u>PART #</u>	<u>DESCRIPTION</u>
PE-01	ADAPTER SHAFT
PE-02	ADAPTER HOUSING
PE-03	HOUSING MOUNT SCREW
PE-04	HOUSING CLAMP SCREW
PE-05	KEY
PCD-110	MOTOR, COMPLETE, 110V
PCD-220	MOTOR, COMPLETE, 220V

ELECTRIC PREPZILLA MOTOR ADAPTER AND COUPLER

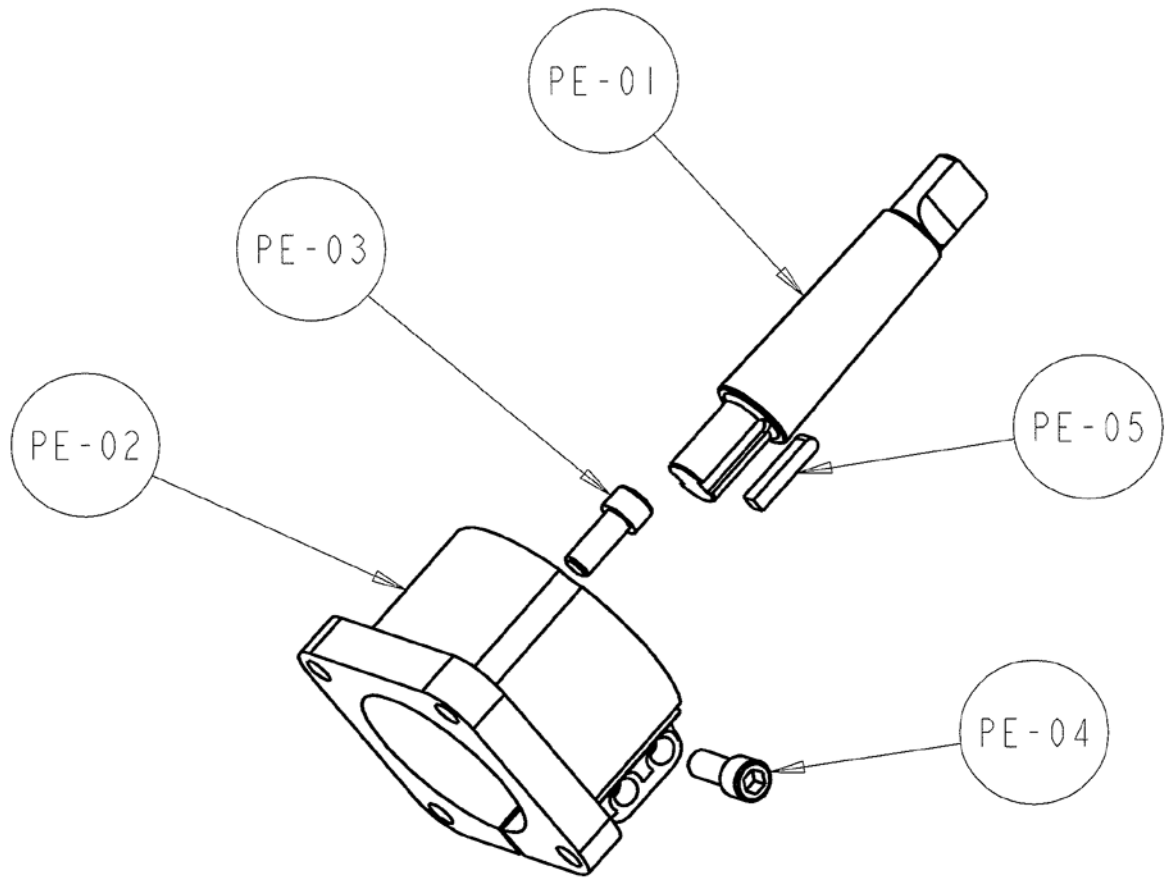

PREPZILLA MILLHOG
HOSE ASSEMBLY PARTS LIST

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>
AHG-308	FILLER PLUG	AHW-303	HOSE 6'
AHG-309	FILLER PLUG "O" RING	AHW-304	SEAL
AHG-310	OIL ADJUSTING VALVE ASSY.	AHW-305	CHICAGO FITTING 1/2"
AHG-311	VALVE GASKET	AHW-306	SAFETY PIN
AHG-312	SIGHT DISK & SEAL	AHW-307A	FILTER & LUBE ASSY. COMP.
AHG-313	SIGHT DISK LOCK NUT	AHW-308A	FILTER REPAIR KIT
AHM-318	THREADED COUPLER	AHW-309	HOSE BARB, 1/2" x 1/2"
AHM-319	BALL VALVE 3/8"	AHW-310	FILTER HOUSING
AHW-300	NIPPLE, 3/8" x 3/8"	AHW-311	LUBRICATOR HOUSING
AHW-301	COUPLER	AHW-312	SPRING
AHW-302	HOSE BARB 1/2" x 3/8"	AH-202B	COMPLETE HOSE ASSY.

ESCO TOOL PREPZILLA AIR HOSE ASSEMBLY

